 




# M I K O

## IBUKI M Air Purifier User Manual

MA-02

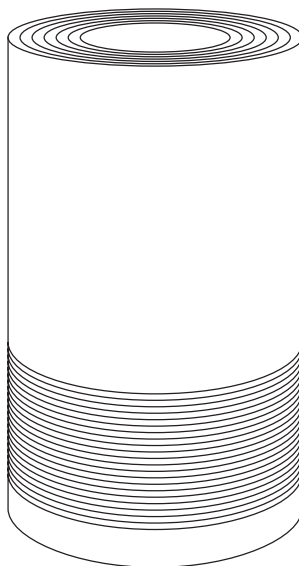



## READ AND SAVE THESE INSTRUCTIONS

### WARNINGS

Failure to comply with the warnings listed below may result in electric shock or serious injury.

**!** This product should be used only in accordance with the specifications outlined in this manual. Usage other than what has been specified here may result in serious injury.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

#### READ ALL INSTRUCTIONS BEFORE USING THE UNIT.

- **IMPORTANT** - This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- To avoid fire or shock hazard, plug the appliance directly into the right AC electrical outlet.
- Keep the cord out of heavy traffic areas. To avoid fire hazard, NEVER put the cord under rugs, near heat registers, radiator, stoves or heaters.
- To protect against electrical hazards, DO NOT immerse in water or other liquids. Do not use near water.
- Children cannot recognize the hazards associated with the usage of electrical appliances. For this reason, always supervise children when they are near the unit.
- Always unplug the air purifier before moving it, opening the grill, changing filters, cleaning or whenever the air purifier is not in use. Be sure to pull by the plug and not the cord.
- **NEVER** drop or insert any object into any openings.
- **DO NOT** run cord under carpeting.

- **DO NOT** cover cord with throw rugs, runners, or similar coverings.
- **DO NOT** route cord under furniture or appliances. Arrange cord away from the traffic area and where it will not be tripped over.
- **DO NOT** operate any appliance with a damaged cord or plug, if the motor fan fails to rotate, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Send to Customer Service for assistance.
- Use appliances only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- **DO NOT** use outdoors.
- **DO NOT** place anything on top of the unit.
- **NEVER** block the air openings, grills/outlets or place on a soft surface such as a bed or sofa, as this could cause the unit to tip over, blocking the air intake or outtake opening.
- **DO NOT** attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
- **WARNING:** To reduce the risk of fire or electric shock, do not use this device with any solid-state speed control device.



 


## Product troubleshooting

Issue	Checklist	Possible solution
Unit doesn't work	Power is on or not	press the power button to turn unit on
	power plug is plugged tightly	pull out the plug and plug in again
Peculiar smell form the air outlet	The filter has absorbed too dust or particle	Change the filter
Poor performance	Indoor air is too dry	increase indoor humidity
	Enough space around the unit	Place the unit at least 1 foot from any walls or furniture. Remove obstacles
No airflow	obstacles blocking the air outlet or the filter is not removed from plastic bags	Remove obstacles or remove the filter from its plastic bag

If you can resolve issue with this troubleshooting instructions, please contact MIKO customer service at [hello@shopmiko.com](mailto:hello@shopmiko.com) or **866-201-9816**

## Get to know your Ibuki M

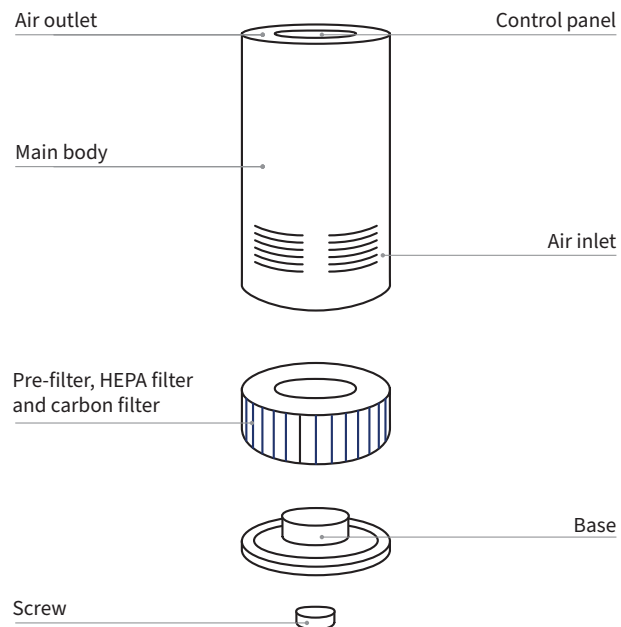



## 3 Stage filtration

### PRE-FILTER:

 
Captures initial large particles like hair and pet dander

### H13 HEPA FILTER:

Captures dust, smoke, pollen and allergens.

### CARBON FILTER:

Eliminates odors and bad smells

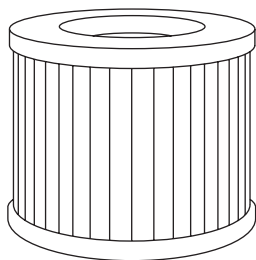

## Operation instructions

### BEFORE OPERATING THE AIR PURIFIER:

1. Carefully remove your air purifier from box and plastic bag.
2. Select a firm, level and flat location for the air purifier.

 
\*For proper air flow, locate the unit at least 1 foot from any wall or furniture.

\*Make sure none of the grills are blocked.

3. Plug the power cord into a right voltage AC outlet.

**IMPORTANT:** When moving the air purifier, always lift the unit firmly by your hands.

## Control panel instructions

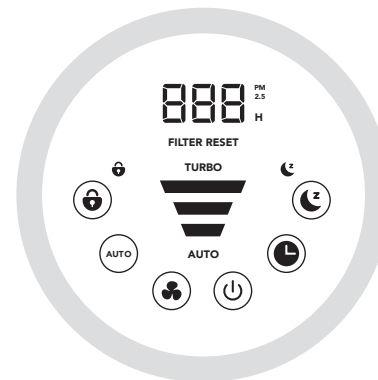

**POWER:** Press this button to power on/off the device.

When the "FILTER RESET" indicator turns red, replace the filter, press this button and hold 2 seconds to reset the filter program.



**TIMER:** Press this button to set a timer of 1,2...12 hours and "H" will light up to indicate a timer is on. To turn off a timer, press this button until the screen shows "--" and "H" is off.



**SLEEP:** Press this button to enter sleep mode. Fan speed runs on the lowest setting and all the indicator lights turn off. Press any buttons to wake up.



**SPEED:** There are 4 settings of air cleaning power. Press the button to switch between L(I),M(II),H(III) and Turbo speed.



**AUTO:** Press this button to enter AUTO mode. Unit automatically adjusts fan speed according to air quality tested by dust sensor.



**CHILD LOCK:** Press and hold this button 1 second to turn on child lock to lock all the settings. Press and hold to unlock.





## Air quality indicator light:

The circle light shows different color to indicate air quality in the space:

Air quality	Light color	PM2.5 (ug/m <sup>3</sup> )
Excellent	Blue	0-49
Moderate	Yellow	50-99
Slightly polluted	Orange	100-149
heavily polluted	Red	150+



**Important note:** When the unit is not in use, please turn it off and unplug it.

## Cleaning & maintenance

Wipe the unit at least once every month with a clean, dry, soft cloth.

More frequent cleaning may be required depending on environmental conditions.

### NOTE:

**Do NOT** stick any foreign objects or your fingers into the unit.

**Do NOT** use gasoline, benzine, thinner, harsh cleaners, etc. on/in the unit while cleaning as it will damage the product.

 
**NEVER** use alcohol or other solvents.

## Filter replacement & installation

### TIME TO REPLACE FILTER

The FILTER RESET indicator turns on means it is time to replace the filter. Follow the instructions below to change filter and reset the program.


\*IBUKI Filter will last approximately 6 months.

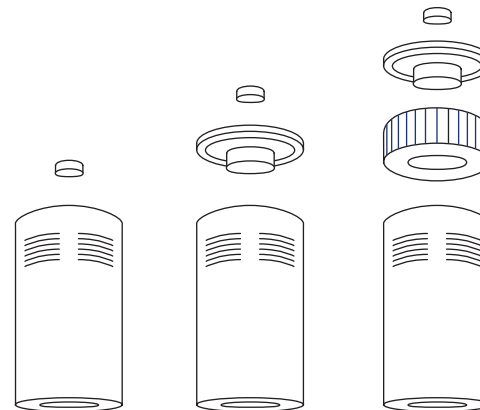

1. Flip you IBUKI upside down.
2. Take off the screw cap by rotating it counterclockwise, and remove the base cover.
3. Take out the dirty filter and replace with a new filter in the unit.
4. Place the base cover back and fasten it with the screw cap.
5. Press the Power button and hold for 2 seconds to reset the filter.

 Get your replacement filters on **SHOPMIKO.COM** or simply scan this QR code



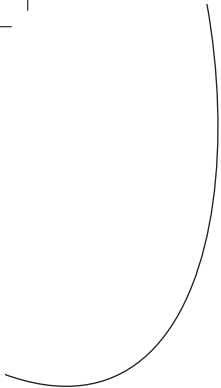

# M I K O

For all comments, questions or complaints reach out to us:

[hello@shopmiko.com](mailto:hello@shopmiko.com)

[www.shopmiko.com](http://www.shopmiko.com)

+1-866-201-9816

